



AEA MEGALODON AIR RIFLE USER'S MANUAL

WWW.AEAAIRGUN.COM

WARNING

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING AEA PRODUCTS

ALWAYS wear eye and ear protection when using an airgun.

This air rifle is not a toy and carelessness use may result in serious injury or accidental death.

This airgun is recommended for adult use or under adult supervision.

Never attempt to disassemble this rifle without manufacturer authority.

Never fire the rifle when it is out of air or when air cylinder is removed!

Use lead pellets only, The use of any projectile other than a lead pellet is unauthorized and will void the manufacturers warranty.

AEA Airguns are designed for Use with dry-filtered, compressed air to fill the air cylinder.

NEVER use other gases such as oxygen, acetylene, hydrogen, etc.

Never fill this air rifle air cylinder above 310 BAR /4500 PSI (working pressure) unless stated for the specific model.

The resulting damage caused by overcharging the air cylinder is not covered by the manufacturers warranty.

Always point the air rifle in a safe direction and be aware of the backstop.

Never point an air rifle at anything you do not intend to shoot.

Always make sure that each pellet you use is in the proper caliber for the air gun and never re-use pellets.

Never leave the air gun loaded if it is not going to be used.

Keep your fingers away from the trigger and do not load the rifle until you are ready to fire.

Anytime you transport an airgun, make sure the safety is on and the gun is unloaded.

Store the airgun (unloaded) and ammunition in separate, safe places, out of reach of children.

Users should follow all local laws regarding air gun ownership and use..

We recommended that you have the air cylinder visually inspected every 3 years.

FAILURE TO OBSERVE THE ABOVE WARNINGS CAN RESULT IN DAMAGE TO YOUR AIR RIFLE, ACCIDENTAL DEATH OR SERIOUS INJURY. PRACTINCE GUN

SAFETY AND RESPONSIBILITY

AEA MEGALODON AIR RIFLE SPECIFICATION

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS AIRGUN




SPECIFICATION

CALIBER	.35 CAL
	.45 CAL
	.50 CAL
	.58 CAL
MAGAZINE CAPACITY	11 SHOTS
	8 SHOTS
	8 SHOTS
	6 SHOTS
15 INCH BARREL LENGTH MUZZLE ENGERGY	.35 CAL 120 GR UP TO 770 FPS/158 FPE
	.45 CAL 225 GR UP TO 790 FPS/311 FPE
	.50 CAL 230 GR UP TO 825 FPS/348 FPE
	.58 CAL 450 GR UP TO 685 FPS/496 FPE
22 INCH BARREL LENGTH MUZZLE ENGERGY	.35 CAL 120 GR UP TO 850 FPS/192 FPE
	.45 CAL 225 GR UP TO 885 FPS/391 FPE
	.50 CAL 230 GR UP TO 925 FPS/435 FPE
	.58 CAL 450 GR UP TO 765 FPS/585 FPE
WEIGHT	15 INCH BARREL 7.9 LBS
	22 INCH BARREL 8.9 LBS
OVERALL LENGTH (DUAL BOTTLE)	15 INCH BARREL 31.5 INCHES
	22 INCH BARREL 38.5 INCHES
AIR TUBE CAPACITY	15 INCH BARREL 500CC
	22 INCH BARREL 600CC

FAILURE TO OBSERVE THE WARNINGS & CAUTIONS CAN RESULT IN DAMAGE TO YOUR AIR RIFLE, ACCIDENTAL DEATH OR SERIOUS INJURY. THE SAFE USE AND STORAGE IS THE OWNER / USER'S RESPONSIBILITY.

AEA MEGALODON AIR RIFLE DIAGRAM

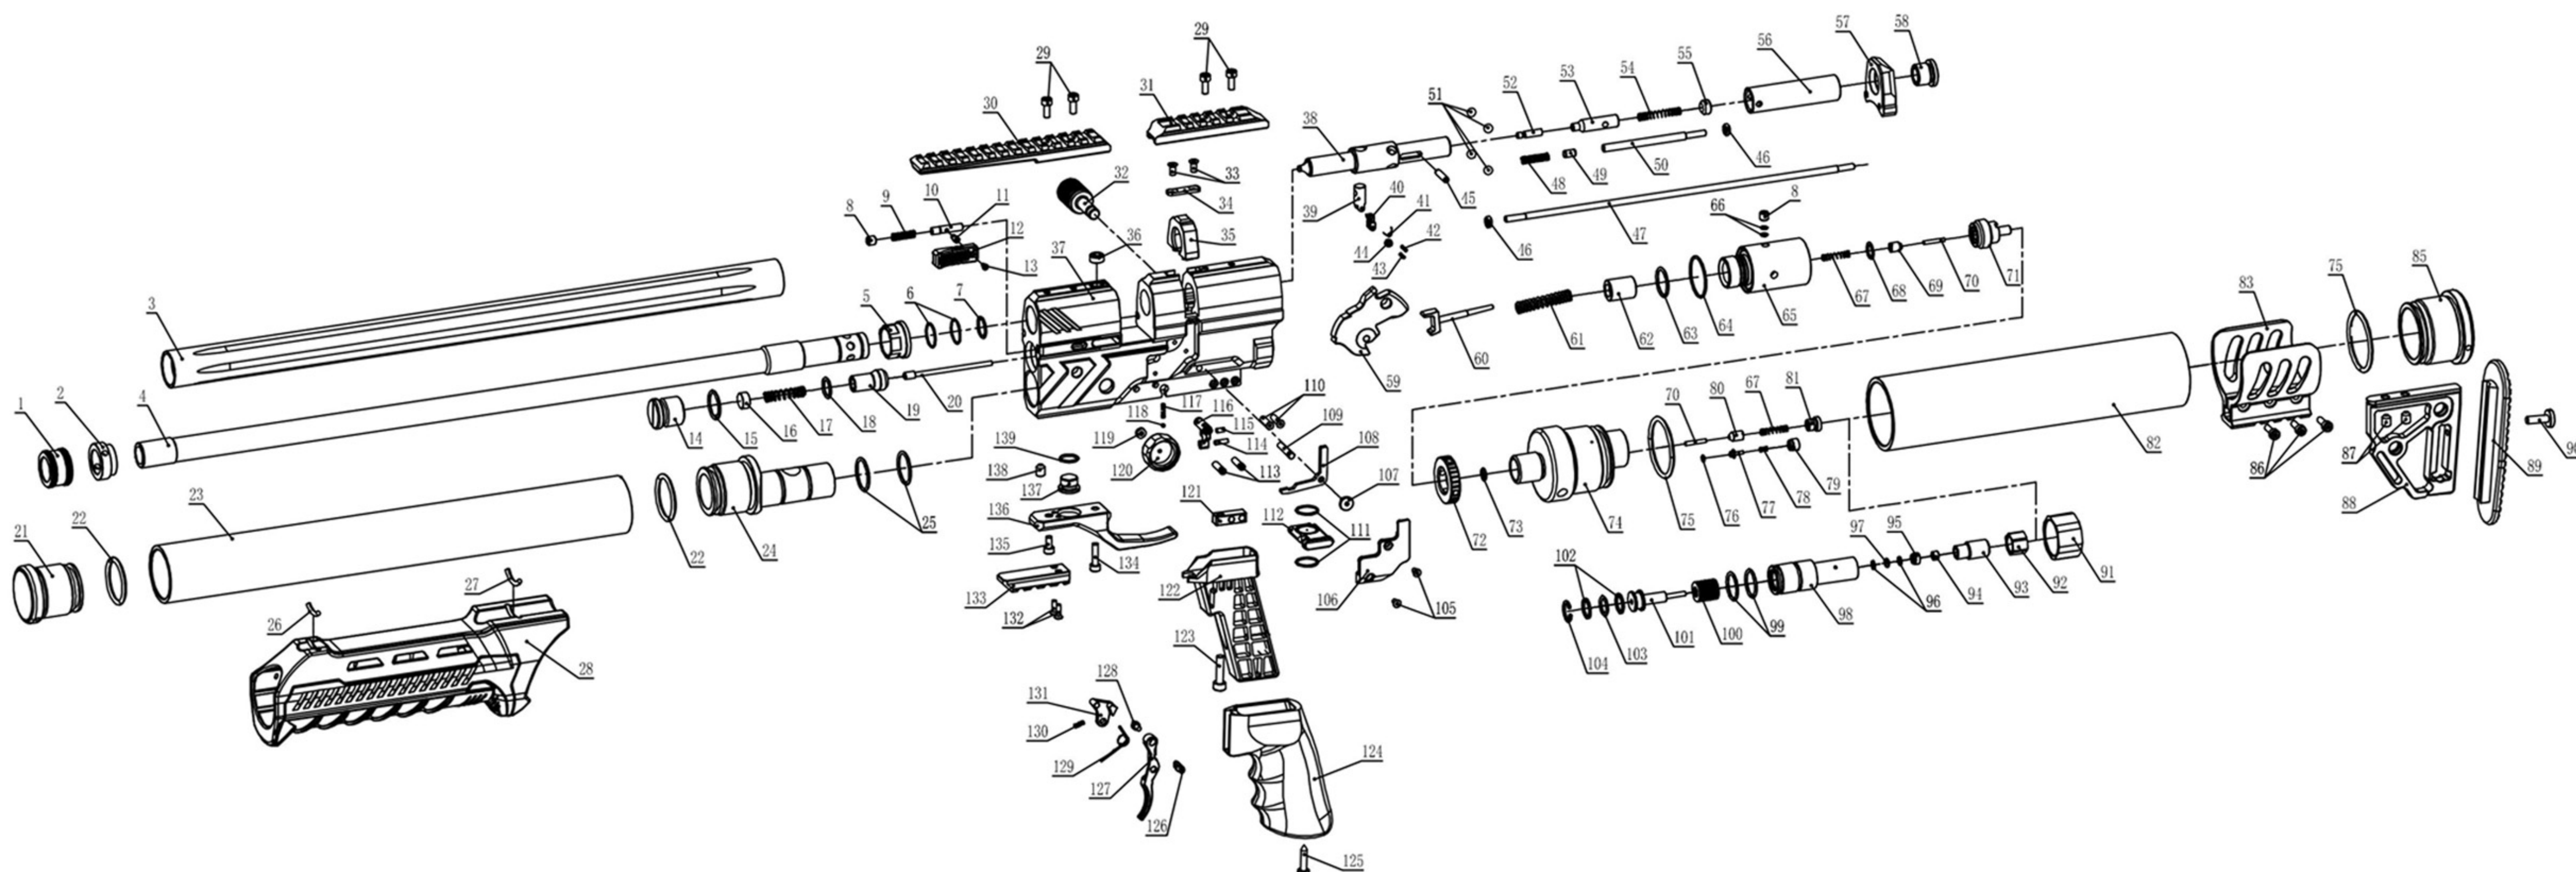

AEA
PRECISION AIRGUNS

www.aaairgun.com
aaairgun@gmail.com

Air Filling

1. Insert 8mm air fill probe into your air filling devices (such as high pressure air compressor, scuba air tanks, hand pump or recharging station) hose connector.

Notice: Before filling, secure that devices hose and the fill probe connecting tightly.

2. Insert the 8mm fill probe into the air filling hole on the rear airtube.

3. Close the bleed screw on your recharging devices, open the recharging devices valve very slowly. When recharging you must watch the gun's air tube gauge and the air filling devices air gauge carefully. Never exceed 310 bar / 4500 psi (unless the model allows it). When the air fill is complete, close the recharging devices valves. To disconnect the cylinder from the air filling devices, open the bleed screw. This allows high pressure air inside the refill clamp to exhaust, making it possible to pull out the 8mm fill probe from air filling hole.

Warning: AEA Airguns are designed for Use with dry-filtered, compressed air only. Never use other gases such as oxygen, acetylene, hydrogen, etc. Never fill the air cylinder above 310 BAR / 4500 psi unless model specified. The resulting damage caused by overcharging the air cylinder or air tank is not covered by the manufacturer's warranty.



Air Filling Hole



Pump grip

Remove And Load the Magazine

Push safety button to the safe position. Hold and Pull back the pump grip and keep the pump grip on the bottom of the rear position. Remove the magazine from the slot. After moving the pump grip forward you can not reinsert the magazine. You must discharge the hammer or dry fire and cock the air rifle again. Then you can insert the magazine back into the slot.

WARNING

Due to the AEA Megalodon Air Rifle being a bigbore air rifle with a magazine, AEA has specially designed a structure to prevent double loading.

In the cocked state, the bolt probe cannot fully retract from the magazine to allow it to rotate, preventing the next bullet from moving into the chamber. This prevents double loading. Therefore, you cannot remove the magazine while the air rifle is cocked. When the magazine is stuck by the probe. Do not forcefully remove the magazine. Forcibly removing the magazine can cause damage to the gun, which is not covered under the manufacturer's warranty.

Hence, you must fire the gun or discharge the hammer before the bolt probe can fully retract from the magazine and allow removal of the magazine.

(Warning: Please note that at this point, there may already be a bullet in the chamber. Make sure the muzzle is always pointing to the safe direction.)

Reloading Magazine

WARNINGS:

Lead pellets shoot only. The use of any projectile other than a lead pellet is unauthorized and will void the manufacturer's warranty. Always make sure that each pellet you use is the proper caliber for the airgun and never re-use pellets.

ROTATE the magazine's cover in counter clockwise direction. Don't rotate in the wrong direction or you will damage the magazine's spring tension. User abuse will void manufacturer's warranty automatically. Load pellets by pushing the transparent cover counter clockwise until the cover stops. Keep the cover open in the end position.

(Step 1) Load pellets by pushing the transparent cover counter clockwise until the cover stops. Keep the cover open in the end position.

Put one pellet in the open slot from the opposite end of the magazine, the head of the pellet shall be pointing out of the hole.(Step 2 and Step 3)

The back of the pellet should now be seen through the transparent cover.(Step 4)This pellet will lock magazine spring.

Now turn the magazine so that the transparent cover is facing you. Turn the cover clockwise one slot at the time and fill in remaining pellets from the transparent cover. Lock the transparent cover at starting position. (Step 5 and Step 6)

Step 1



Step 4



Step 2



Step 5



Step 3



Step 6



Loading the Magazine

Pull the pump grip to its rear position.
Insert the full loaded magazine into the slot.

**POINTED IN A SAFE DIRECTION ALL THE TIME AND MAKE SURE THE AIR RIFLE
IS UNLOADED**

Safety button



Before loading the airgun, ensure the safety is in the "Safe" position and always point the muzzle in a safe direction.

Cocking: Manually push the safety button to the right until it locks into the "Safe" position. Ensure the muzzle is pointed away from yourself and others.

Loading: Insert the full loaded magazine into the slot as per the manufacturer's instructions.

Discharging: When ready to fire, aim the airgun safely towards your target.

Firing: When confident of your target and surroundings, disengage the safety to the "Fire" position and squeeze the trigger gently.

Warning

Always prioritize safety and be aware of your surroundings when handling and using an airgun.



To cock the AEA Megalodon air rifle, pull the pump grip until the bolt is held in the cocked position.

After cocking, push the pump grip forward in order to push the lead bullet into the chamber.

To fire, take your target, aim, switch the safety to the fire position and squeeze the trigger until the air rifle discharges.

WARNING

Always wear eye and ear protection when using an airgun.

HAMMER DECOCK

To decock the hammer, pull and hold pump grip, squeeze the trigger slowly to decock the hammer spring while holding the pump grip.

WARNING:

Do not move the safety to the Fire position unless the air gun is pointed in a safe direction. Practice safe and responsible gun handling practices.

After decocking the hammer, always to dry fire the air rifle in a safe direction to ensure the breech is clear.

OPERATIONAL NOTICES

Modification, Removing or disassembling the safety mechanism

Modification, disassembling or removing any of the safety parts can disable the rifle and will void the warranty and will create a hazardous condition.

MODIFICATIONS TO THE VALVE

The valve in the air rifle is not a user-maintainable item. Any attempt to remove or modify the valve in any way will void the warranty and may create a hazardous condition. Filling the air tank with a gas other than dry compressed air is not recommended and will void the warranty.

CLEANING THE BARREL

An airgun barrel needs standard maintenance. If you do clean the barrel, use a good quality bore brush of the correct size, and use a non-jointed cleaning rod if possible. Do not use cleaning solvents and agents formulated for firearms because they can damage the seals and O-rings, use silicon cleaning lubricants and cleaning products.

WARNING

This rifle should only be disassembled by factory-authorized technician and a factory-authorized repair station, or you will void manufacturer warranty automatically including any modification or tuning as well.

MAINTENANCE OF THE AIR CYLINDER

AEA Airguns' air cylinder is made of 7075 aluminium alloy. The air cylinders are designed for Use with dry-filtered, compressed air to fill the air cylinder. Never use other gases such as oxygen, acetylene, hydrogen, etc. Never fill the air cylinder above 310 BAR /4500 psi. The resulting damage caused by overcharging the air cylinder is not covered by the manufacturer's warranty.

SHOOTING SAFETY

Never point the muzzle of the rifle at anything you do not intend to shoot. Practice gun safety and responsible gun ownership.

Always wear safety glasses when shooting or operating an air rifle, safety first! Avoid shooting targets that will make the pellet ricochet.

Warranty Information

All AEA Airguns carry ONE YEAR Manufacturer Warranty against faulty workmanship and defective materials. The Manufacturer Warranty will start automatically after you purchased an AEA product from the dealer. Any AEA airguns covered by this warranty will be repaired or replaced at the discretion of AEA Precision Airguns Inc, should a defect in material or workmanship be found, Contact your dealer first. If the rifle is determined to have a defect within the warranty period, contact the warranty center or authorized repair facility to arrange service. The warranty guarantee does not cover any damage caused by tampering with the air rifle or abuse. Normal wear parts such as O-rings and plastic magazines are not covered as well.

Repairs may only be made by the Manufacturer Warranty Center or authorized repair facility. This warranty becomes invalid for any gun that is disassembled or modified in any way not specifically authorized by AEA Precision Airguns Manufacturer. This warranty also becomes invalid for any gun that has been damaged by abuse or improper handling.

A ONE YEAR manufacturer's warranty applies in those instances for all AEA airguns.

Official Website: www.aeairgun.com

Email: aeairgun@gmail.com

Photographs, drawings, descriptions, and other information are purely indicative.

AEA Precision Airguns reserves the right to change, modify, or discontinue products or features at any time.

Various AEA Airguns Bring You Completely Different Experiences



AEA
PRECISION AIRGUNS

AEA PRECISION AIRGUNS INC.

www.aeaairgun.com

aeaairgun@gmail.com